

Maintenance Crownline Rev 1 2020

GENERAL MAINTENANCE All Models All hinges, latches, etc. should be periodically lubricated for maximum efficiency and longevity. We recommend checking and tightening all fittings on hay beds at least monthly depending on usage and grease all pivot points. Check hydraulic fluid weekly depending on usage. **Pivot points with set screws may work loose and should be inspected weekly on Arm Beds.**

TOOLBOXES It is recommended that you maintain the seals of the toolboxes on your Crownline Truck Bed by checking the bulb weather-stripping on the box every three months. Ensure that the weather-stripping is affixed to the inner rim of the box and that it is not cracked. Cracking can cause leaking and damage to contents in the bed.

Our hay beds are designed to carry, and haul hay other uses may result in damage to the bed not covered under the warranty.